

Gefen[®]

VGA RS232 Extender

EXT-VGARS232-141

User Manual



www.gefen.com

ASKING FOR ASSISTANCE

Technical Support:

Telephone (818) 772-9100
(800) 545-6900

Fax (818) 772-9120

Technical Support Hours:

8:00 AM to 5:00 PM Monday thru Friday, Pacific Time

Write To:

Gefen LLC
c/o Customer Service
20600 Nordhoff St
Chatsworth, CA 91311

www.gefen.com
support@gefen.com

Notice

Gefen LLC reserves the right to make changes in the hardware, packaging and any accompanying documentation without prior written notice.

VGA RS232 Extender is a trademark of Gefen, LLC

© 2011 Gefen LLC. All rights reserved.
All trademarks are the property of their respective owners.

CONTENTS

- 1 Introduction
- 2 Operation Notes
- 3 Features
- 4 Sender Unit Layout
- 5 Sender Unit Descriptions
- 6 Receiver Unit Layout
- 7 Receiver Unit Descriptions
- 8 Connecting and Operating the VGA RS232 Extender
- 8 How to Connect the VGA RS232 Extender
- 8 Wiring Diagram
- 9 Brightness Control
- 10 Cable Skew / Color Divergence Control
- 12 RS-232 Serial Control
- 13 Network Cable Wiring Diagram
- 14 Wall Mounting Instructions
- 15 Specifications
- 16 Warranty

INTRODUCTION

Congratulations on your purchase of the Gefen VGA RS232 Extender. Your complete satisfaction is very important to us.

About Gefen

We specialize in total integration for your home theater, while also focusing on going above and beyond customer expectations to ensure you get the most from your hardware. We invite you to explore our distinct product line. Please visit <http://www.gefen.com> for the latest offerings in High-Definition signal solutions or call us between the hours of 8:00 am and 5:00 pm Monday-Friday, Pacific Standard Time for assistance with your A/V needs. We'll be happy to assist you.

The Gefen VGA RS232 Extender

The Gefen VGA RS232 extends any VGA source to a monitor or digital signage application placed up to 330 feet (100 meters) using one CAT-5 cable. This product also extends RS-232 using the same CAT-5 cable, allowing access to control devices using RS-232.

How It Works

Place the Sender Unit next to the VGA source. Use the included VGA cable to connect the source to the Sender Unit. Connect the Receiver Unit to the monitor or digital signage display with a VGA cable (not supplied). Use one CAT-5 cable, up to 330 feet (100 meters), to connect the Sender Unit to the Receiver Unit. Connect an RS-232 serial cable from the RS-232 port on the Sender Unit to the RS-232 control device. Connect the RS-232 port on the Receiver Unit to the RS-232 device.

OPERATION NOTES

READ THESE NOTES BEFORE INSTALLING OR OPERATING THE GEFEN VGA RS232 EXTENDER

- CAT-5e cables should not exceed 330 feet (100 meters).
- Unshielded (UTP) CAT-5e is recommended.

FEATURES

Features

- Extends any VGA and RS-232 source up to 330 feet (100 meters)
- Supports resolutions up to 1920x1200
- All-digital signal transmission for zero signal loss
- Metal enclosure improves RF shielding

Package Includes

- (1) Gefen VGA RS232 Extender Sender Unit
- (1) Gefen VGA RS232 Extender Receiver Unit
- (1) 6 ft. VGA cable (M-F)
- (1) 6 ft. serial cable (M-F)
- (2) 5V DC Power Supplies
- (1) Set of Wall Mounting Plates
- (1) User Manual

SENDER UNIT LAYOUT

Front



- 1
- 2
- 3
- 4

Back



- 5

SENDER UNIT DESCRIPTIONS

1 *5V DC Power Connector*

Connect the included 5V DC power supply to this connector.

2 *Power Indicator*

This LED will turn bright red once the included 5V DC power supply has been properly connected to the unit and the power supply has been connected to an available electrical outlet.

3 *Locking VGA Port*

Connect a VGA source to this port.

4 *RS-232 Port*

Connect the RS-232 host device to this port.

5 *CAT-5 Output Jack*

Connects the Sender Unit to the Receiver Unit using a CAT-5 cable.

RECEIVER UNIT LAYOUT

Front



- 1
- 2
- 3
- 4

Back



- 5
- 5

RECEIVER UNIT DESCRIPTIONS

1 *Locking VGA Port*

Connect a VGA source device to this VGA port.

2 *RS-232 Port*

Connect the RS-232 device to this port.

3 *Brightness Trimpot*

Adjusts the brightness of the picture.

4 *Power Indicator*

This LED will turn bright red once the included 5V DC power supply has been properly connected to the unit and the locking power supply has been connected to an available electrical outlet.

5 *5V DC Power Connector*

Connect the included 5V DC power supply to this connector.

6 *CAT-5 Input Jack*

Connects the Sender Unit to the Receiver Unit using CAT-5 cabling.

CONNECTING AND OPERATING THE GEFEN VGA RS232 EXTENDER


How to Connect the VGA RS232 Extender

1. Connect the VGA source to the Sender Unit using the provided VGA cable. Connect the VGA monitor to the Receiver Unit using a VGA cable.
2. Connect the RS-232 cable between the RS-232 controller and the RS-232 port on the Sender Unit.
3. Connect an RS-232 cable between the RS-232 device and the RS-232 port on the Receiver Unit.
4. Connect a CAT-5e or CAT-6 cable between the CAT-5 port on the Sender Unit and the CAT-5 port on the Receiver Unit.

NOTE: If terminating network cables in the field, adhere to the TIA/EIA568B specification (see page 12).

5. Connect the 5V DC power supplies to the Sender Unit and Receiver Unit. Connect the included AC power cords. Plug the two (2) power supplies to an available electrical outlet. The LED on both the Sender Unit and the Receiver Unit will turn bright red, indicating that both units are powered.
6. Power on the VGA monitor and the VGA source.

Wiring Diagram for the VGA RS232 Extender

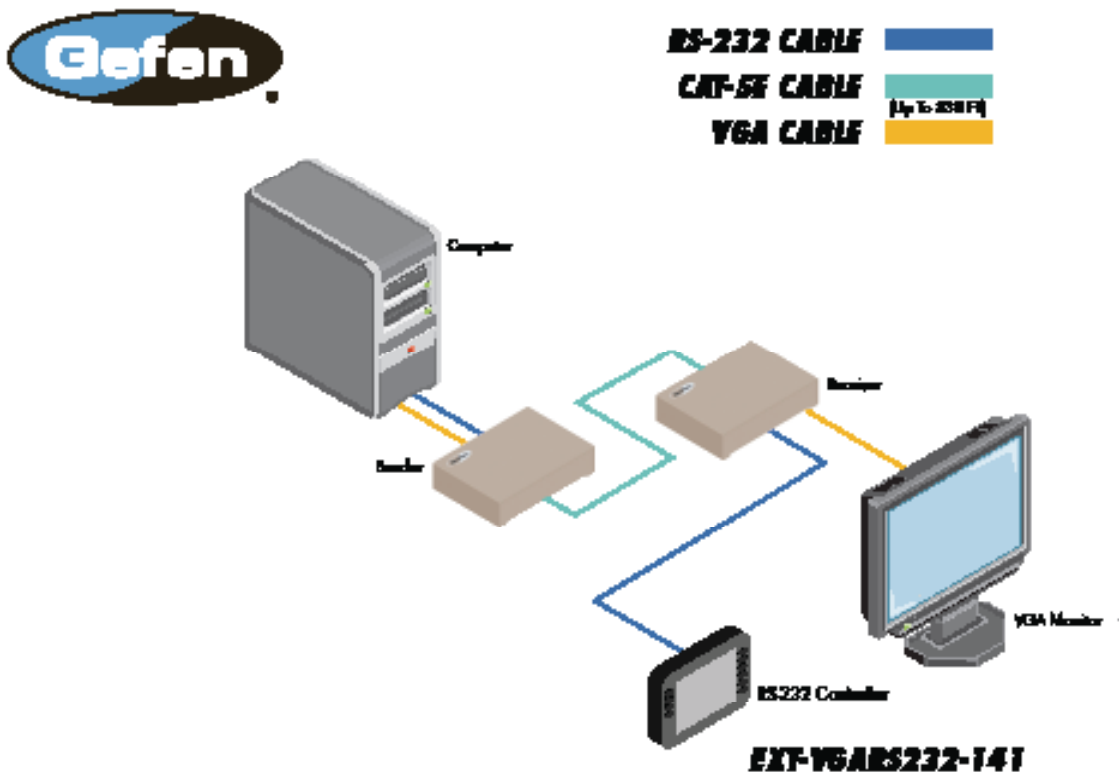

CONNECTING AND OPERATING THE GEFEN VGA RS232 EXTENDER

Brightness Control

The VGA RS232 Extender Receiver Unit has a brightness trimpot to adjust the brightness of the picture. If the picture appears too dark or too bright, following the instructions below.



↑
Brightness trimpot

1. Insert a small flathead adjustment tool into the trim pot.
2. Turn the trim pot in a clockwise fashion until the trim pot stops turning. Do not force the trim pot beyond this point as it may break.
3. Turn the trim pot in millimeter increments in a counter-clockwise fashion until the desired brightness is reached.
4. Remove the trim pot adjustment tool.


CONNECTING AND OPERATING THE GEFEN VGA RS232 EXTENDER

Cable Skew and Color Divergence Control

To reduce the amount of crosstalk between twisted pairs within a CAT-5 cable, the rate of twist varies for each twisted pair. The rate of twist affects the length of each twisted pair and is referred to as *cable skew*.

Normally, when a video signal with a single white line is displayed on the screen, each color component (red, green, blue) combines with the other to create the white line.


Normal video signal

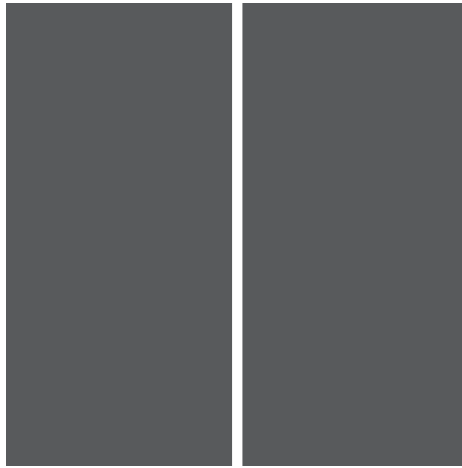

However when extending a video signal over CAT-5, cable skew can cause each color component to arrive at the destination (display) at different times. This causes an undesirable effect known as *color divergence*, where one or more color components are shifted to the left or right.

Video signal containing color divergence

(emphasized for illustrative purposes)

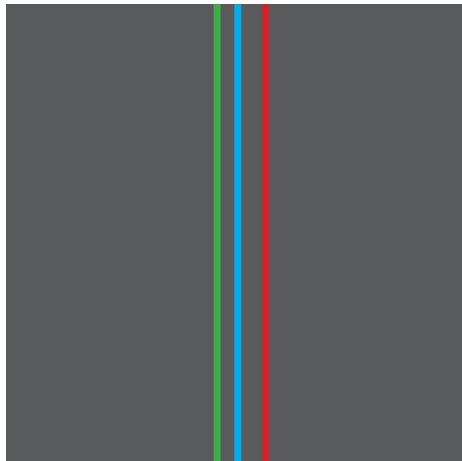


CONNECTING AND OPERATING THE GEFEN VGA RS232 EXTENDER

The VGA RS232 Extender allows for compensation of cable skew using three (3) DIP switch banks, located on the bottom of the Receiver Unit. To access the DIP switches, peel back the small strip of silver-grey tape. Each DIP switch bank controls a different color component: Red, Green, and Blue.

Default DIP switch settings for each bank

DIP Switch	Position
1	OFF
2	OFF
3	OFF
4	OFF

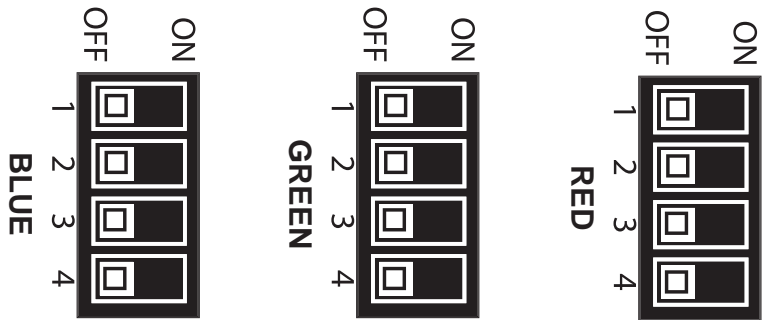


Since the colors in the output signal are directly related to the cable skew and cable length, it is recommended that the following DIP switch settings be used for best performance:

0-25 Feet	All DIP switches are set to OFF for all colors.
26-100 Feet	Set DIP switch #1 ON for all colors. 2,3,4 remain OFF.
101-200 Feet	Set DIP switch #2 ON for all colors. 1,3,4 remain OFF.
201-300 Feet	Set DIP switch #3 ON for all colors. 1,2,4 remain OFF.
301 Feet and Up	Set DIP switch #4 ON for all colors. 1,2,3,remain OFF.

Note that the table above should be used as a guideline. However, if a particular color component is not aligned with the remaining color components, adjust the DIP switch bank relating to the color component that requires correction.


RS-232 SERIAL CONTROL

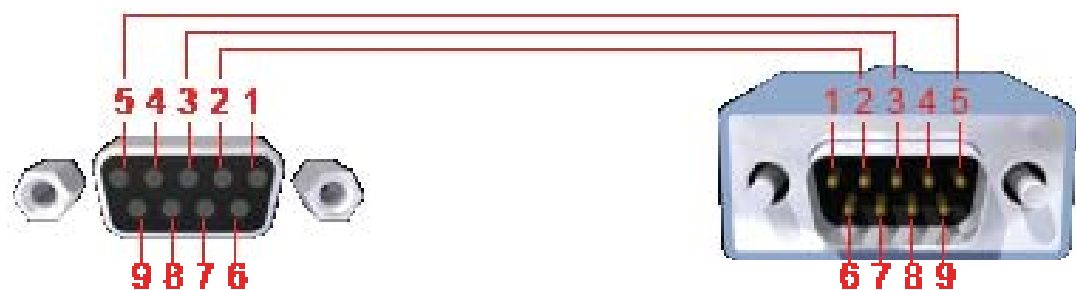

Only Pins 2 (RX), 3 (TX), and 5 (Ground) are used on the RS-232 serial interface

This feature allows for easy integration into automated systems capable of transmitting RS-232 commands. The max allowable bit rate is 115,200 bps.

NETWORK CABLE WIRING DIAGRAM

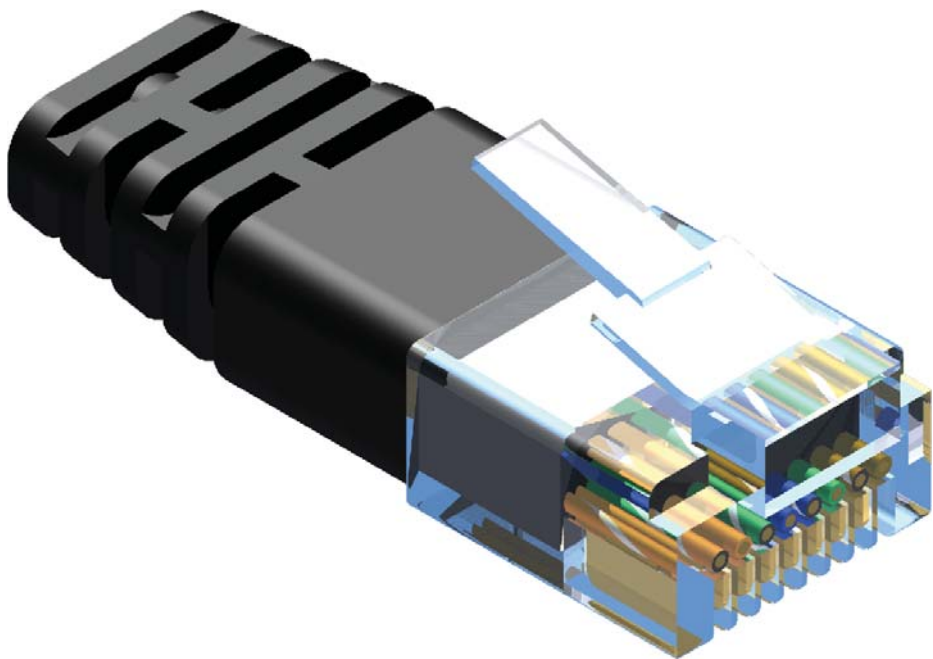


Gefen recommends the TIA/EIA-568-B wiring option. Please adhere to the table below when field-terminating the CAT-5 cable for use with Gefen products.

Pin	Color
1	Orange / White
2	Orange
3	Green / White
4	Blue
5	Blue / White
6	Green
7	Brown / White
8	Brown


CAT-5 cabling comes in stranded and solid core types. Gefen recommends using solid core cabling.

It is recommended to use one continuous run from one end to the other. Connecting through a patch is not recommended.


Mounting Plate Installation

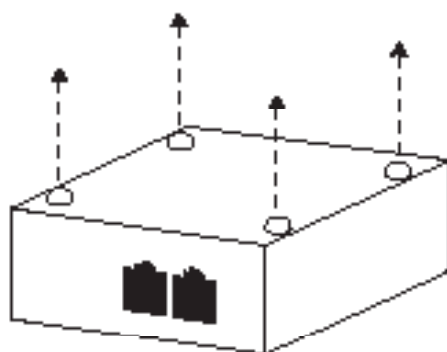**1**

Remove the rubber feet covering the screws off the bottom of the unit.

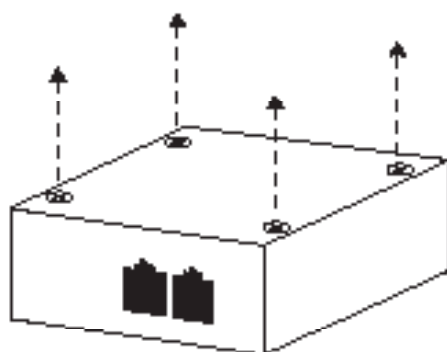**2**

Remove the screws.

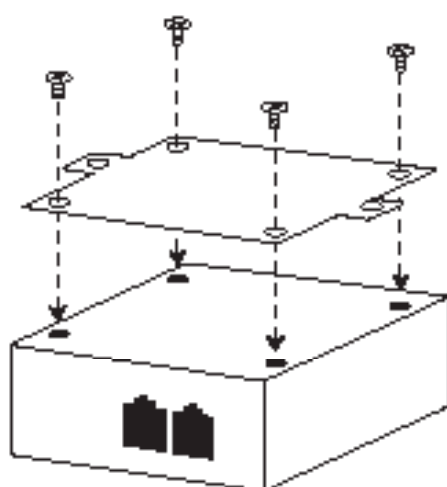**3**

Line up the mounting plates and screw it on to the unit.

SPECIFICATIONS

Video Amplifier Bandwidth	350 MHz
Actual Bandwidth	120 MHz
Input Video Signal	1.2 Vp-p
Horizontal Frequency Range	15-70 KHz
Vertical Frequency Range	30-170 Hz
Video In	HD-15 Male
Video Out	HD-15 Female
Serial In (RS232 Connector)	DB9 9-Pin Female
Serial Out (RS232 Connector).....	DB9 9-Pin Male
Link Connector	RJ-45
Power Consumption	5 W (max.)
Power Supply	5V DC
Dimensions	4" W x 1.2" H x 3" D
Shipping Weight	4 lbs.

WARRANTY

Gefen warrants the equipment it manufactures to be free from defects in material and workmanship.

If equipment fails because of such defects and Gefen is notified within two (2) years from the date of shipment, Gefen will, at its option, repair or replace the equipment, provided that the equipment has not been subjected to mechanical, electrical, or other abuse or modifications. Equipment that fails under conditions other than those covered will be repaired at the current price of parts and labor in effect at the time of repair. Such repairs are warranted for ninety (90) days from the day of reshipment to the Buyer.

This warranty is in lieu of all other warranties expressed or implied, including without limitation, any implied warranty of merchantability or fitness for any particular purpose, all of which are expressly disclaimed.

1. Proof of sale may be required in order to claim warranty.
2. Customers outside the US are responsible for shipping charges to and from Gefen.
3. Copper cables are limited to a 30 day warranty and cables must be in their original condition.

The information in this manual has been carefully checked and is believed to be accurate. However, Gefen assumes no responsibility for any inaccuracies that may be contained in this manual. In no event will Gefen be liable for direct, indirect, special, incidental, or consequential damages resulting from any defect or omission in this manual, even if advised of the possibility of such damages. The technical information contained herein regarding the features and specifications is subject to change without notice.

For the latest warranty coverage information, please visit Gefen's Warranty web page at <http://www.gefen.com/kvm/aboutus/warranty.jsp>

PRODUCT REGISTRATION

Please register your product online by visiting Gefen's web site at <http://www.gefen.com/kvm/Registry/Registration.jsp>



20600 Nordhoff St., Chatsworth CA 91311

1-800-545-6900 818-772-9100 fax: 818-772-9120

www.gefen.com support@gefen.com



This product uses UL listed power supplies.